


BIG LOADS

HOW TO LOAD AN 18-20 FT CAR HAULER

Quick renter reference - bumper-pull car trailer

LOAD POSITION - QUICK VISUAL

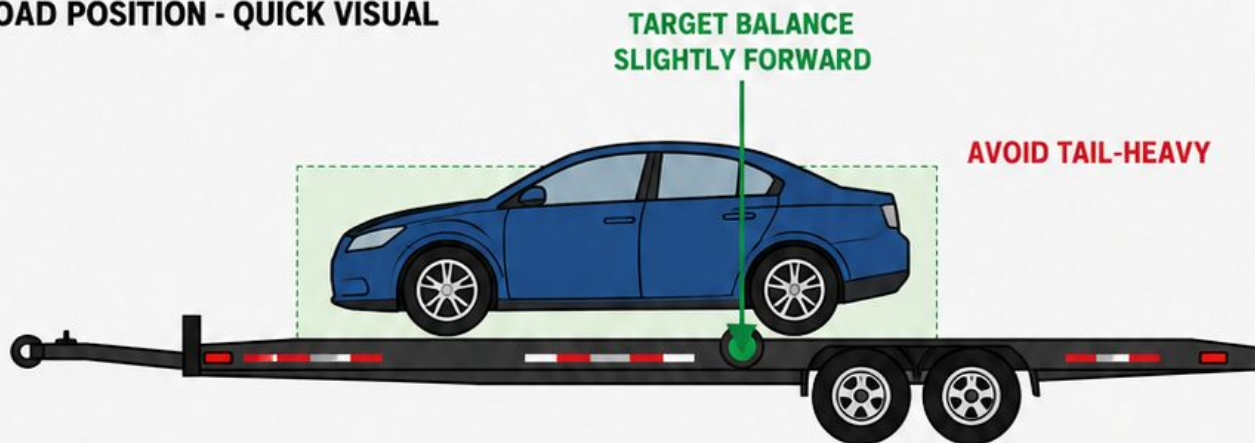

1 CONFIRM THE LIMITS

Check trailer payload, vehicle weight, hitch rating, and tow vehicle capacity before loading.

2 LOAD FOR TONGUE WEIGHT

Center the vehicle left-to-right. Move it forward or backward until the trailer has stable, positive tongue weight - commonly about 10-15% on bumper-pull setups.

3 SECURE THE VEHICLE

Use rated tie-downs at approved vehicle points. Keep straps clear of sharp edges, hot exhaust, steering, and brake lines.

4 RECHECK AFTER MOVING

After a short drive, stop safely and recheck straps, coupler, chains, lights, tire condition, and trailer attitude.

THIS TRAILER GVWR: _____ Payload: _____ Target tongue wt.: _____ Owner phone: _____

STOP - BEFORE YOU TOW

- ☒ Coupler fully latched
- ☒ Safety chains crossed/attached
- ☒ Jack raised and locked
- ☒ Lights/brakes working
- ☒ Tie-downs tight
- ☒ Load sits level and stable

General renter reference only. Follow the trailer manufacturer labels/manual, tow vehicle limits, hitch ratings, tie-down laws, and all applicable load securement laws. Never exceed GVWR or GAWR. Vehicle orientation is not universal. Front-engine, rear-engine, and modified vehicles may need different placement. Set position by measured/verified tongue weight and trailer stability.